


Back of Panel


LEADING EDGE STARTS IN CORNER →

FIRST PANEL IS PUT IN PLACE, USUALLY STARTING IN A CORNER FOR SUPPORT. OPPOSITE EDGE WITH EDGE CLIPS IS THEN PROPERLY ATTACHED TO WALL.

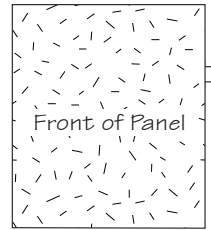

Wall

EDGE CLIPS ON LEADING EDGE OF SUBSEQUENT PANELS ARE SLID BEHIND FIRST PANEL AND THEN EDGE CLIPS ON OPPOSITE EDGE ARE ATTACHED TO WALL.

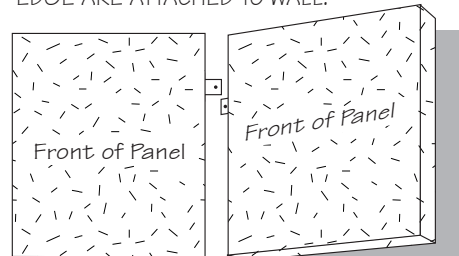

View From Back Side

